

## Deck Flood Light - SC117 Installation Instructions

**Before starting this installation read the Hella Oval 100 mounting instructions supplied. Consult a qualified marine electrician before starting this installation.**

### **SC117 Kit Contents:**

- 1x Hella Deck Flood Light + nut/bolt
- 1x 3" Tube Clamp assembly
- 1x Stainless Steel bracket
- 1x M8x50 bolt
- 1x M8 washer
- 1x M8 Nyloc nut
- 2x M6x20 Hex Head Bolts

- 2x M6 Nyloc Nuts
- 4x M6 White nut/bolt covers
- 8x M6 Nylon Washers

### **Also Required:**

- 2x 10mm Spanners
- 1x 13mm Spanner
- Ø6mm / 15/16" drill bit


### **Fitting SC117 during SC100 pole installation (following point 7 on the SC100 pole instruction sheet):**

1. SC117 is designed to mount on the SC100 pole and is attached using the 3" clamps provided. Assemble the 3" clamps and light mounting bracket **around the pole** at the height at which you wish to mount the deck light (see **Figure 1**).


2. Drill a clearance hole in the UPVC cover strip for the light cable. Ø 6mm / ¼".

3. Attach the light to the light mounting bracket using the fastenings provided.

\* The deck light is factory fitted with 200mm of cable. This will need to be extended for connection into the boat.

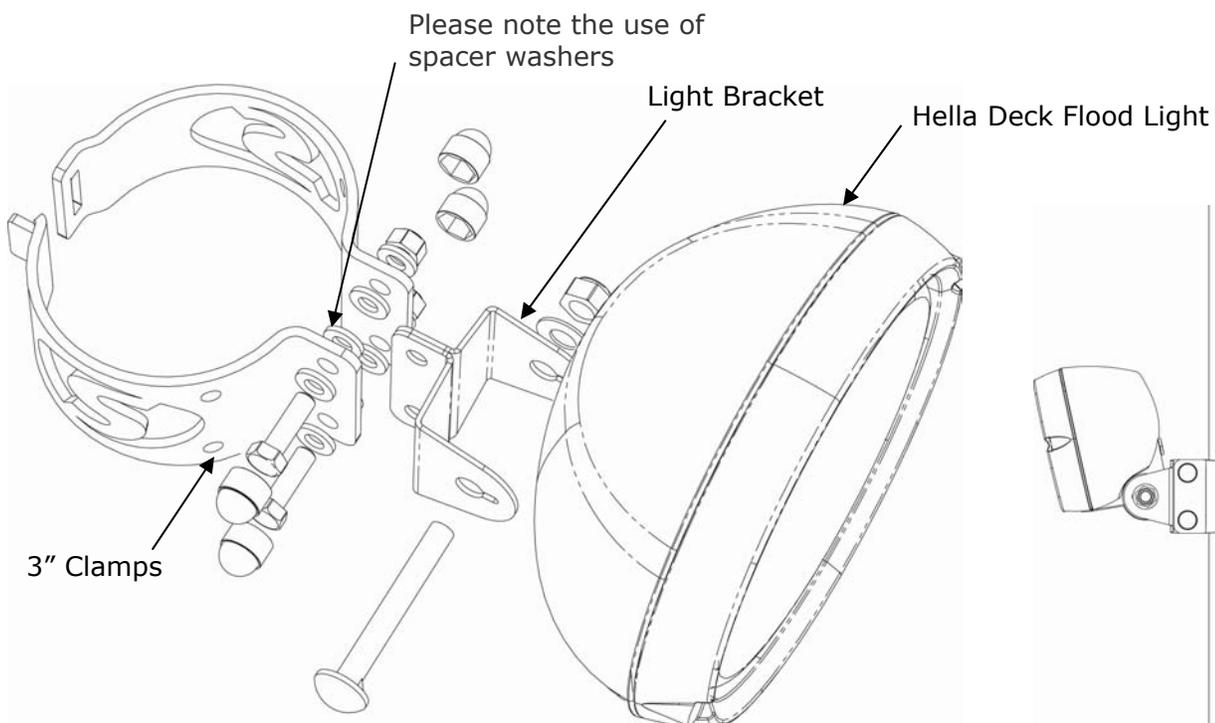

**Figure 1**

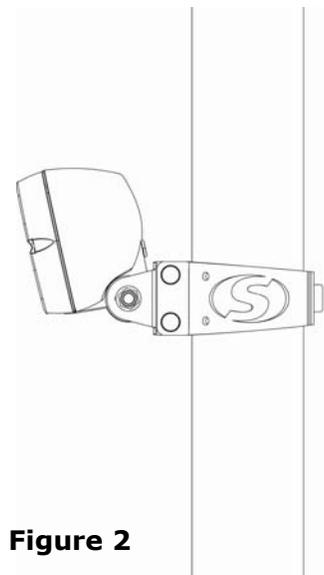

**Figure 2**