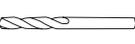
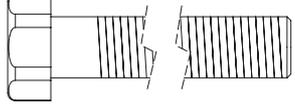



Scanstrut Installation Instructions SC30

Tools Required


	ø30-50mm (1 1/4"-2")
	Drill bits to suit Radome fasteners & drainage hole if needed.
	Power drill

Parts Required

	4x M8 Fasteners (length to suit mounting area)
---	--

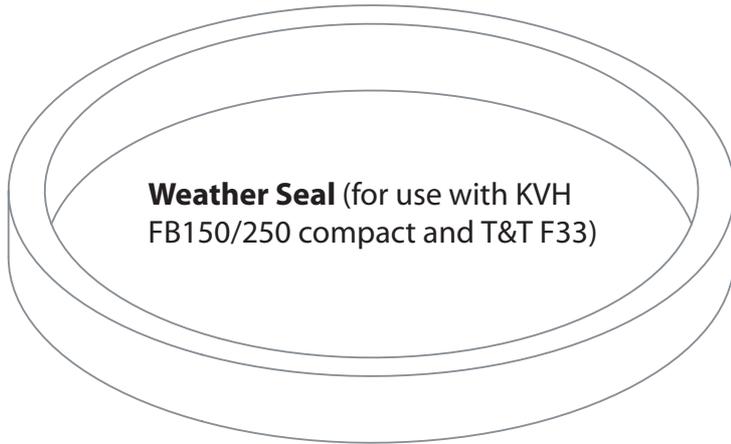


Drainage hole (ø3mm (1/8"))
to be drilled when fitting
FB150/250 compact, or
Thrane & Thrane F33

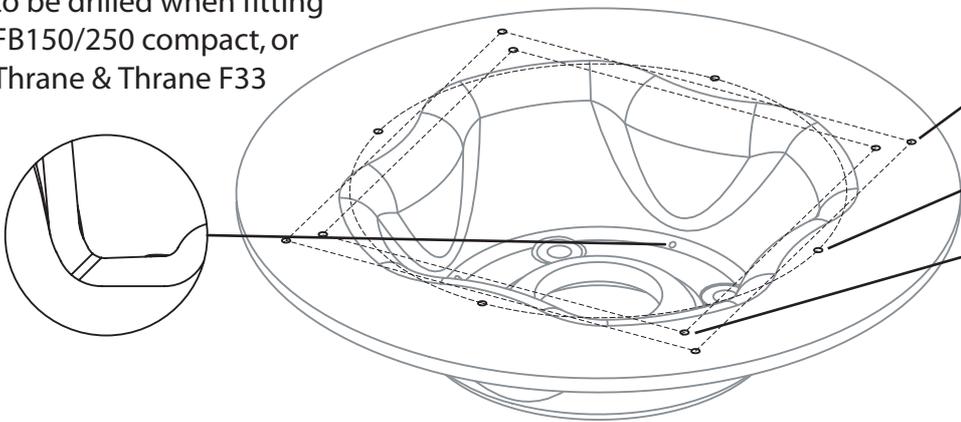

163mmx163mm (6.4"x6.4")
(KVH M1)

ø175.4mm PCD (FB150/250
compact, Thrane & Thrane F33)

140mmx140mm (5.7"x5.7")
(Intellian i1, 12)

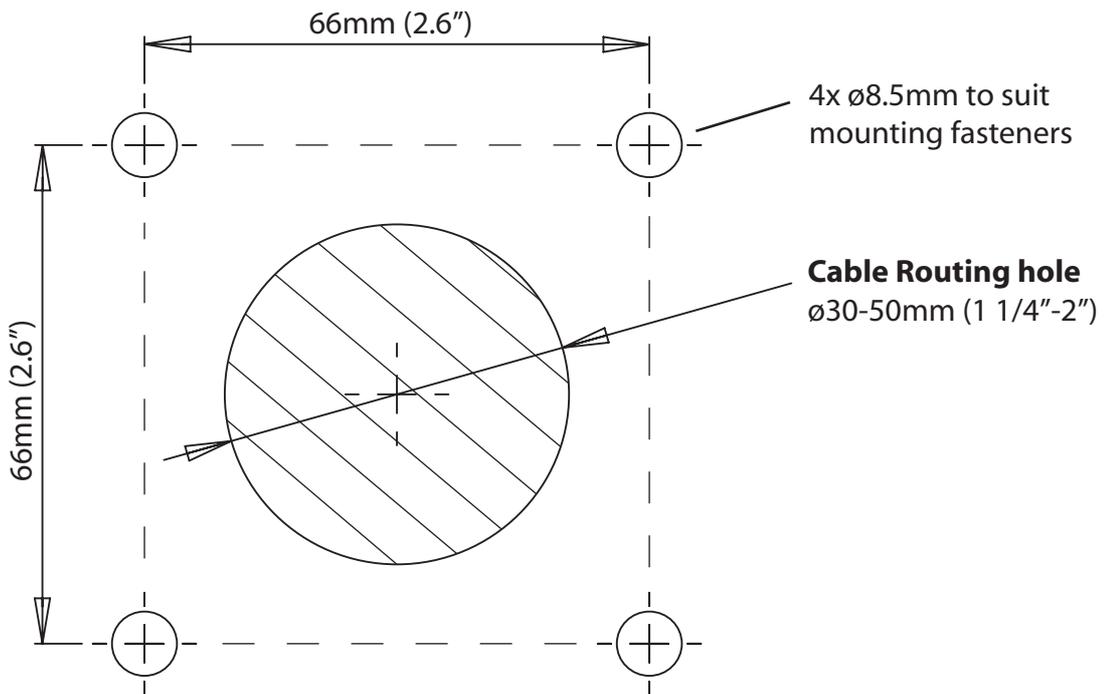

Drilling Guide