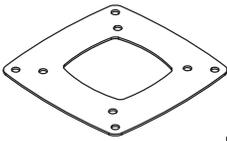
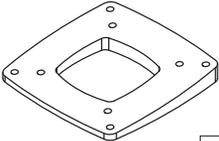


Installation Instructions

19-07-2021 (Issue 2)

WD-OPNARY-01

Parts List

Base Seal  19025 1	Wedge  17225 1
---	---


Optional Extra


4° Washer  WD-WP 4

Tools Required

 Spanner to match device fixings.	 10.5mm (5/16")
 Hole saw ø50mm (2")	 Power Drill

Parts Required

 M10	 Large Plain washer
--	---

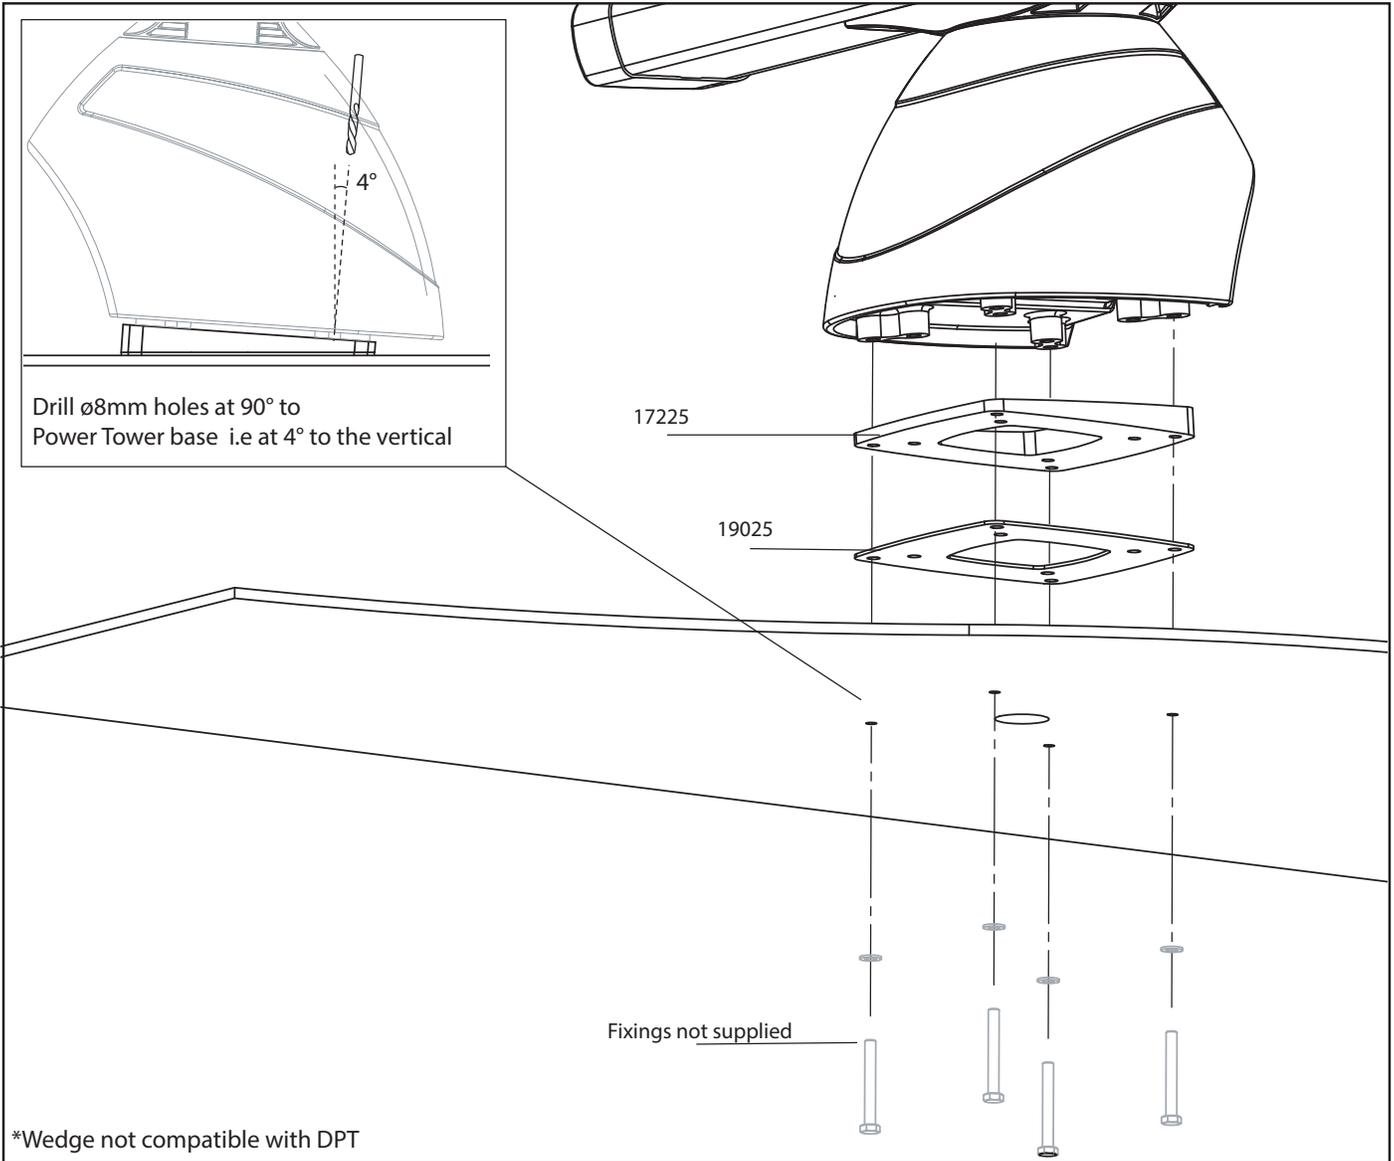

Share your installation with us.



UK & International
+44 (0)1392 531280
sales@scanstrut.com

For further installation
and warranty information
please visit:
www.scanstrut.com

USA
+1 860 308 1416
usasaes@scanstrut.com

